



Press the **OK** on your remote to highlight an option, press **OK** and you're on your way.



Press **MENU** button twice for the **Main Menu**.



### Quick Menu: Quick And Easy.

The **Quick Menu** offers shortcuts to key **i-Guide** features. Just press **MENU** from anywhere in the guide — or even while you're watching a program — and you'll have access to features like the **Search**, **Favorites**, Digital Music and more.

### All Access With Main Menu.

**Main Menu\*** gives you easy access to all features. Simply press **MENU** twice, then select from the options available, including **TV Listings By Time**, viewing options by category, **Parental Locks**, **Favorites**, **Local Weather** and more.

### Enhanced Searching.

With **i-Guide**, you can sort and view program **Listings By Time**, **Listings By Channel**, or by categories such as Movies, Sports, Kids and more. Select a category from the **Main Menu** or **Quick Menu** to display listings.

Subcategories let you focus your search even further. For example, you can search for movies that fit your mood: comedies, dramas, adventure and more.

### Program Information At Your Fingertips.

**i-Guide** provides **Instant Information** while you view program listings, including program title, start/end time, program rating, a brief program description and helpful indicators that identify your settings, such as **Reminders**, **Recordings** and **Favorites**.



- Blue** – Regular programs
- Purple** – Movies
- Green** – Sports
- Light Blue** – Children's programs



When you find a program you like, press **OK** to make the **Flip Bar** disappear or press **INFO** for more program details.



### Easy-To-Understand Listings.

**TV Listings** appear in a grid format with channel numbers and network call letters down the left side and times along the top. Listings are color coded to help you identify different types of programs.

### Smart Channel Surfing.

The **Flip Bar** lets you see program information as you change channels.

The **Mini Guide** lets you watch television and view listings without having to leave your program. To access, press **OK** or **INFO** then use the **◀▶** buttons to browse time and use the **▲▼** buttons to browse channels.



Use the arrow **◀▶** buttons to highlight an icon, a description will appear just below the icons.


### Action Icon Shortcuts.

From the Program Information screen, you can use the **Action Icons** at the bottom of the screen to set a **Reminder**, see other air times and more.

For more detailed information, press the **INFO** button on your remote.

## Parental Locks To Protect Your Family.

**Parental Locks** let you restrict viewing and purchases of TV programming based on your preferences. Set a personalized 4-digit **PIN** and you can place locks on selected ratings, channels and titles. You can also hide adult titles from being displayed on screen.

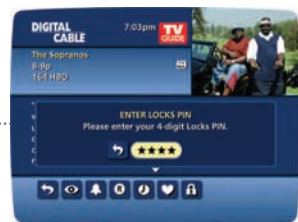


Select Setup from the Main Menu or to set up Locks and PINs.



## Go Ahead, Play Favorites.

**i-Guide's Favorites** feature lets you quickly access the channels you've designated as your **Favorites**. Just select **Favorites** from the **Main Menu** or from the **Quick Menu**.

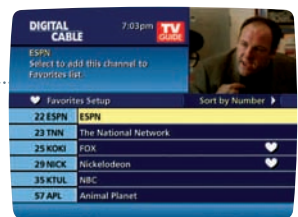

If your PPV program is scheduled to air at a future time, a **Reminder** is automatically set to appear before your program begins.

## Pay-Per-View\*, Made Easy.

Ordering **PPV** movies and events is easy with **i-Guide**. From the **Main Menu** or **Quick Menu**, select any of the PPV options to see a list of available programs. Use your remote to get detailed information and order. You can even cancel through **i-Guide**. And if you do not tune in to the program, you won't be charged for it.†



Access **On Demand programming** from **Main Menu**, **Quick Menu** or a **channel in the TV Listings**.

## On Demand\*\* Brings The Video Store To You.

Rent an **On Demand** program or package and you can watch it at your convenience, as many times as you want within the rental period. You can even pause, fast-forward and rewind.

# introducing i-Guide.™

The all new interactive programming guide from TV Guide. It's intuitive, intelligent and inspiring. It unlocks a world of greater choice, convenience and control as you watch television.

### With i-Guide you'll enjoy:

- A sleek, new design
- A convenient, time-saving **Quick Menu**
- A friendlier display with a full 90 minutes of programming listings
- Enhanced searching
- Increased speed
- And **Mini Guide**, a whole new way to watch TV and surf at the same time

**Try i-Guide.** In no time, you'll be able to **Set Reminders**, **Favorites**, **Parental Locks**, and use our **Mini-Guide** to find out what's next, while you continue to watch your favorite shows. Plus, you'll have access to great features like **On Demand\*\*** and **Digital Video Recording\*\***.

With **i-Guide**, the world is at your fingertips.

## Remote Control Features

### Basic Navigation

- **Yellow** is always the highlight color. As you navigate listings using the remote, the highlight appears on screen to indicate the current selection.
- Press the buttons to move the highlight.
- Press **OK** to make a selection.
- Press the **EXIT** button to return to watching TV.



## Digital Video Recording (DVR)\*\* Puts You In Control.

Pause live television. Rewind and replay programs. Record your favorites all season long. With **DVR**, you're in control. Now you can record up to 90 hours of programming, or up to 10 hours of High Definition programming\*\* — all without rentals, tapes or returns.

### Control Live TV.

Any time you tune to a channel, the **DVR** starts a temporary recording. So you can **PAUSE** if the phone rings, **REWIND** the scene you missed and **FAST-FORWARD** to skip what you don't want to watch.

### Three Ways To Record.

Press **RECORD** on your remote any time while watching TV or navigating through the guide for easy, one-touch recording. Or, you can record interactively by program or manually schedule your recording.

### Many Ways To Play.

Your **DVR** offers many playback controls.

< **Pause** > Press **PAUSE** to freeze, press **PLAY** to resume.

< **Rewind** > Press **REWIND**. Press it again up to 4 times to increase the rewind speed.

< **Fast Forward** > Press **FAST FORWARD**. Press it again up to 4 times to increase the speed.

< **Slow Motion** > Press **PAUSE** and then **FAST FORWARD** or **PAUSE** and then **REWIND**. To return to regular speed, press **PLAY**.

< **Instant Replay** > Press **PAGE** to replay the last 15 seconds. Press repeatedly to continue skipping back in 15-second intervals.

< **Return to Live TV** > To return to the live TV you have paused or rewound, press the button.

Some remotes have **Instant Replay** and **Live** buttons.

\*Menu selections vary depending on the services your cable provider offers.

\*\*PPV, On Demand and DVR not available in all areas. On Demand programs may not be recorded with DVR. DVR recording capacities vary.

†In systems that offer phone ordering, call your cable company to cancel your PPV order.



**Pennsylvania:** 911 N. Market Street, Berwick, PA 18603  
**Maryland:** 43920 Airport View Drive • Hollywood, MD 20636  
**Virginia:** 11387 Ridge Road • King George, VA 22485  
[www.metrocast.com](http://www.metrocast.com)

**1-800-633-8578**

## inside i-Guide™ Quick Reference Guide

